

**Polyurethane Architectural Elements**

*Value and Design come together to create a line of polyurethane millwork designed to give all your projects a distinctive finish ...a designers finish.*

**Suggested**

**Polyurethane Installation**

Polyurethane mouldings may be installed much the same way you would install wood mouldings. For a better fit, it is advised that a flat or "Butt Joint" is used to join longer lengths of polyurethane mouldings. Cut all pieces 1/8th of an inch longer than the required measurement, fitting the ends in place first and the middle sections last. Always place a continuous bead of premium polyurethane adhesive along all adjoining wall and ceiling surfaces before final positioning of the moulding. Poly-glue is essential when attaching one length of moulding to the next. A pneumatic pin nailer works well for fastening polyurethane mouldings to wall and ceiling surfaces; alternatively, trim head drywall screws or finishing nails may be used.

**Filling and Sanding**

Once all of the mouldings are fixed in place, fill any joints or remaining voids with a paintable siliconized latex caulking. This same caulking may be applied sparingly along the top and bottom edges of the moulding where it meets the ceiling and wall. A damp cloth or silicone coving tool may be used to clear away any excess caulking to leave a clean professional look.

Any remaining nail or screw holes may be filled with sandable, paintable non-shrinking filler. Be careful not to over sand the surfaces of your polyurethane mouldings. Sanding past the protective barrier undercoating may necessitate further filling and sanding to maintain a paintable surface.

**Ceiling Medallions**

Place a solid bead of premium adhesive around and about the backside of the medallion. Pressing the medallion into place, it may then be secured with 4 trim head dry wall screws. Be sure to place the screws so that any holes created may be filled and sanded with minimal effort.

**Finishing**

Before installing moulding, lightly sand and wipe material to avoid any dirt and impurities. This is important to obtain good adhesion and a smooth finish. Comes primed white and ready to finish with a good quality oil or latex based paint.

**INDEX**

( product number index on page 32 )

**CEILING DOMES**

Decorative Recessed ..... 31  
 Plain ..... 30

**COMBINATION MOULDING ..... 13**

**CORNER BLOCKS ( MITER - FREE )..... 12**

**CORNICES**

Decorative ..... 2-8  
 Plain ..... 9-11

**DOMES ..... 30-31**

**FRIEZES ..... 16**

**MEDALLIONS ..... 20-23**

**NICHES**

Recessed ..... 24  
 Surface Mounted ..... 25

**PANEL MOULDINGS..... 14-15**

**PANEL & BASE ..... 17**

**PANEL ACCESSORIES ..... 18-19**

**DOOR SURROUNDS & ACCESSORIES ..... 29**

**DOOR / WINDOW**

**CROSSHEADS & KEYSTONES ..... 28-29**

**PILASTERS ..... 26-29**

Massive ..... 27


**STAIR BRACKETS ..... 23**

**DESIGNERS WORLD MILLWORK**  
**YOUR SINGLE SOURCE**  
**FOR ARCHITECTURAL PRODUCTS**



# Decorative CORNERS

Polyurethane  
Architectural  
Elements

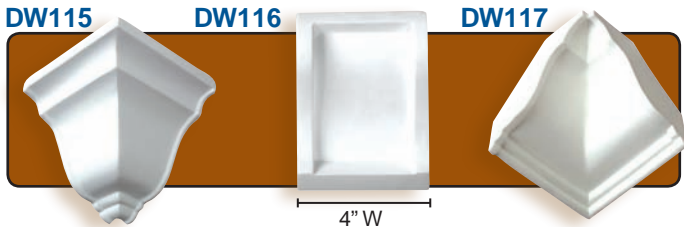

**DW115** **DW116** **DW117**  
 OUTSIDE CORNER 4" H 5-1/4" Proj. \$6.55 ea.  
 CENTER 4" H 4" Proj. \$7.06 ea.  
 INSIDE CORNER 4" H 5-1/4" Proj. \$6.55 ea.

Works with our DWI Mouldings:

- DW1126...page 3
- DW1128...page 3
- DW1130...page 3
- DW1136...page 4
- DW1220...page 9
- DW1225...page 9
- DW1230...page 9



**DW113** **DW114**  
 OUTSIDE CORNER 3-3/4" H 5" Proj. \$5.64 ea.  
 INSIDE CORNER 3-3/4" H 5" Proj. \$5.14 ea.

Works with our DWI Mouldings:


- DW1120...page 3
- DW1122...page 3
- DW1130...page 3
- DW1220...page 9
- DW1225...page 9
- DW1230...page 9



**DW110** **DW111** **DW112**  
 OUTSIDE CORNER 3" H 4-1/8" Proj. \$5.85 ea.  
 CENTER 3" H 3" Proj. \$5.85 ea.  
 INSIDE CORNER 3" H 4-1/8" Proj. \$5.85 ea.

Works with our DWI Mouldings:


- DW1114...page 2
- DW1210...page 9
- DW1215...page 9

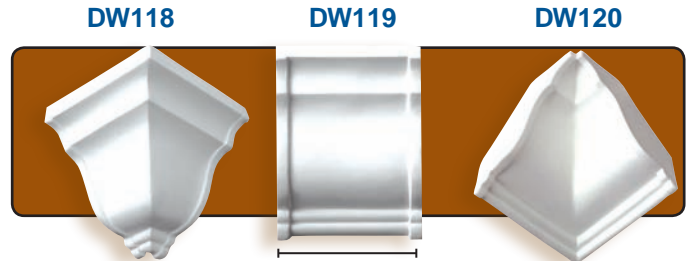

**DW118** **DW119** **DW120**  
 OUTSIDE CORNER 4-3/4" H 6-3/4" Proj. \$9.12 ea.  
 CENTER 4-3/4" H 4-5/8" Proj. \$9.12 ea.  
 INSIDE CORNER 4-3/4" H 6-3/4" Proj. \$9.12 ea.

Works with our DWI Mouldings:

- DW1146...page 4
- DW1150...page 5
- DW1152...page 5
- DW1157...page 5
- DW1245...page 10

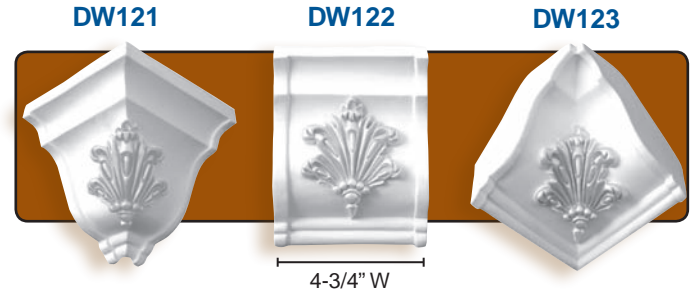

**DW121** **DW122** **DW123**  
 OUTSIDE CORNER 4-3/4" H 6-1/2" Proj. \$10.18 ea.  
 CENTER 4-3/4" H 4-3/4" Proj. \$10.18 ea.  
 INSIDE CORNER 4-3/4" H 6-1/2" Proj. \$10.18 ea.

Works with our DWI Mouldings:

- DW1146...page 4
- DW1150...page 5
- DW1152...page 5
- DW1157...page 5
- DW1245...page 10